


LED CITY LIGHTS

DIRECTION FOR USE

L=120

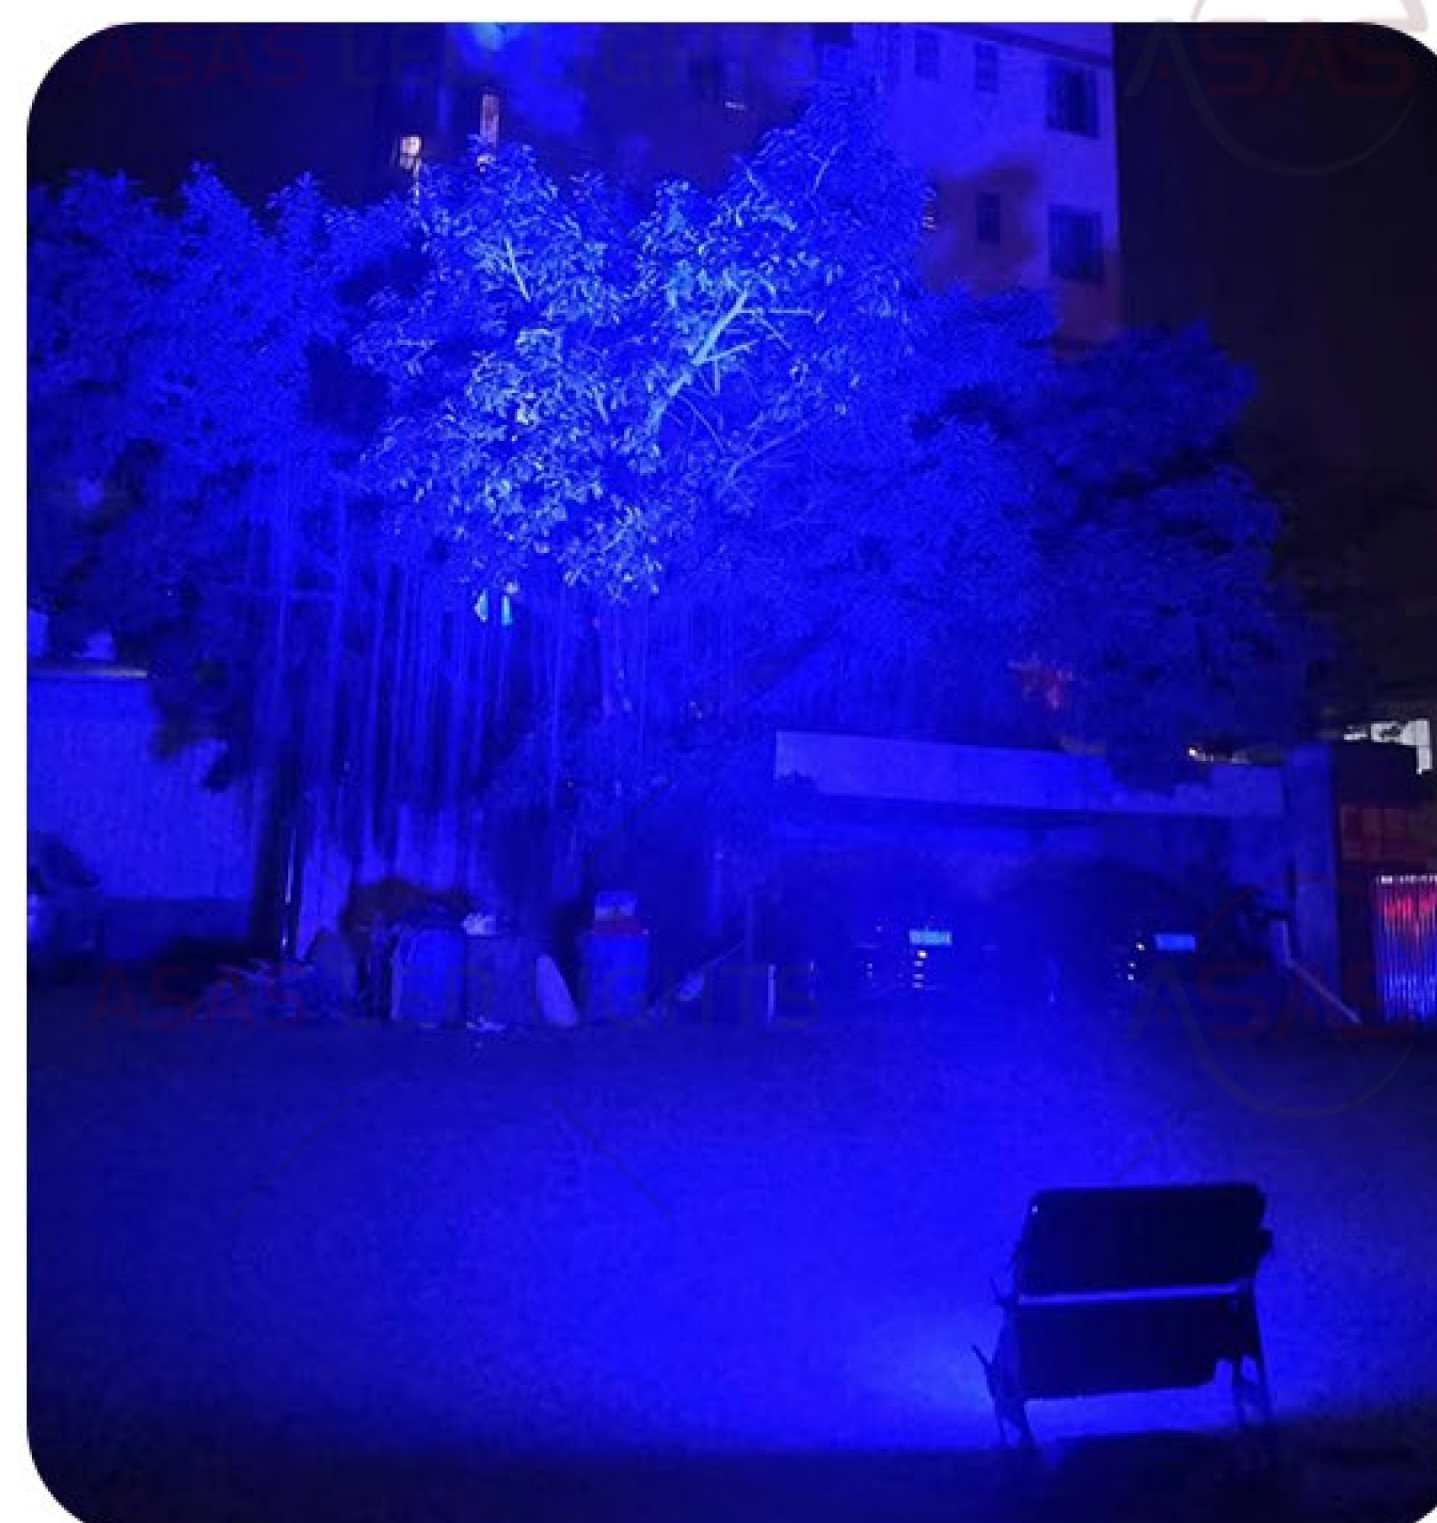

1. Thank you very much for using this company's LED series stage lighting, please check the voltage for safe operation of this product.

2. Technical parameters

LED WALL WASH LIGHT

1200W - LED SOURCE 120X12W RGBW 4IN1 LEDS

DIMMER: 0-100%

STOBE: 1-20TIMES/SECOND

BEAM ANGLE: 40DEG

CONTROL: STANDARD DMX512 SIGNAL, MASTER-SLAVE, AUTO RUNNING


DMX CHANNEL: 8/16CH

IP RATE: IP55 - EFFECT DISTANCE: 60M

N.W: 38KG, G.W: 41KG

DIMENSIONS: 650X370X540MM

3. Display screen:

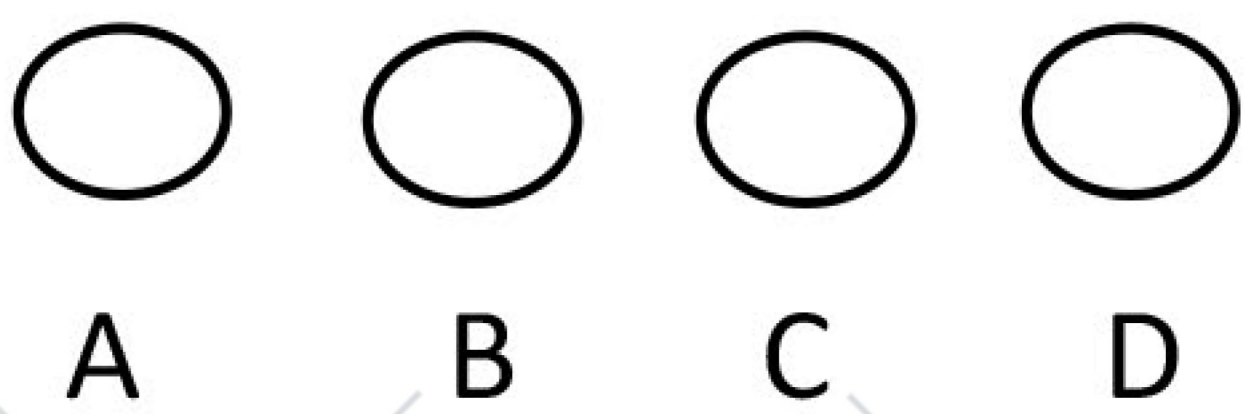

- A. Function Keys
- B. +
- C. -
- D. Enter
- E. LED

Instructions: press A (have many options change effect, Effect press D to determine), DMX512 have (3channel, 7channel 15channel 19channel) can choose, choose what you need, can Press D to determine.

4. LED, Function table (Choose the required functionality, press D to determine)

NO	FUNCTION	FUNCTIONAL SPECIFICATIONS
1	d001	(001-512) B , C (Change the data)
2	CH--	3 CH 7 CH 15 CH 19 CH
3	CC50	A color change (00 – 99) B. C (Control the speed of the color change)
4	CP50	Changes of mixed color (00 – 99) B. C (Control the speed of change)
5	DE50	The fast pace of change color (00-99) B. C (Control the speed of the color change)
6	PE50	(00-99) B, C (Control the speed of the sound)
7	R255	Red (000-255) B, C (change)
8	G2255	Green (000-255) B, C (change)

9	B255	Blue (000-255) B. C (change)
10	AL --	Master-slave

5. DMX512 (3 CH)

NO	FUNCTION	FUNCTIONAL SPECIFICATIONS
1 CH	RED	Change the brightness of the red
2 CH	GREEN	Change the brightness of the green
3 CH	BLUE	Change the brightness of the blue

6. DMX512 (7 CH)

NO	FUNCTION	FUNCTIONAL SPECIFICATIONS
1 CH	Dimmer	Control the brightness
2 CH	Shutter	Stroboscopic speed control
3 CH	Program selection	10 - 50: (Color) 51-99 : (Color change) 100 - 150: (Slow transformation) 151 - 200: (Fast transformation) 201 - 255: (Slow transformation)
4 CH	Speed	Control the speed of change
5 CH	Red	Change the brightness of the red
6 CH	Green	Change me brightness of the green
7 CH	Blue	Change the brightness of the blue

7. DMX512 (15CH – 19CH)

NO	FUNCTION	FUNCTIONAL SPECIFICATIONS
1 CH	Dimmer	Control the brightness
2 CH	Shutter	Stroboscopic speed control
3 CH	Program selection	0-50:(Color) 51-99:(Color Change) 100--150: (Slow, transformation) 151-200: (Fast transformation) 201-255: (Slow transformation)
4 CH	Speed	Control the speed of change
5 CH	Red 1	Change the brightness of the red 1
6 CH	Green 1	Change the brightness of the green 1
7 CH	Blue 1	Change the brightness of the blue 1
8 CH	Red 2	Change the brightness of the red 2
9 CH	Green 2	Change the brightness of the green 2
10 CH	Blue 2	Change the brightness of the blue 2
.....		